


Connecting a smartLAB scale to the Samsung S Health App

The connection of the smartLAB scales to the Samsung S Health App is not enabled by Bluetooth®. The smartLAB scales are paired via ANT+ Wireless. Most Samsung and Sony devices support this type of data transmission and a connection to the Samsung S Health App is then possible.


To pair your smartLAB scale with the Samsung S Health App, please proceed as following:

- 1- Start the S Health App
- 2- Click on the settings button of your smartphone to open the menu (Pic.1)

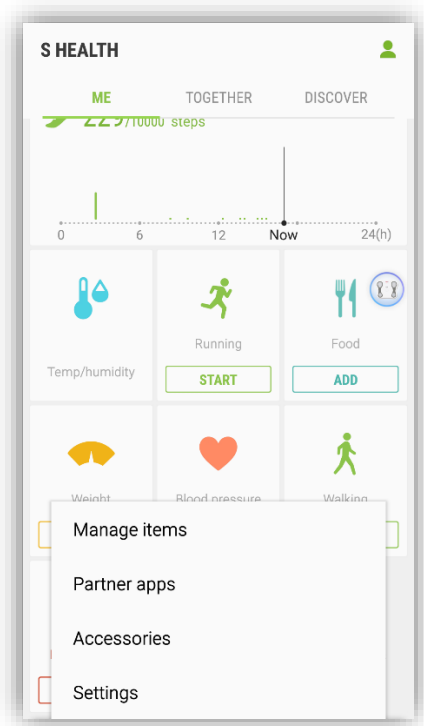

Pic. 1


3- Now click on accessories. Following screen will show:

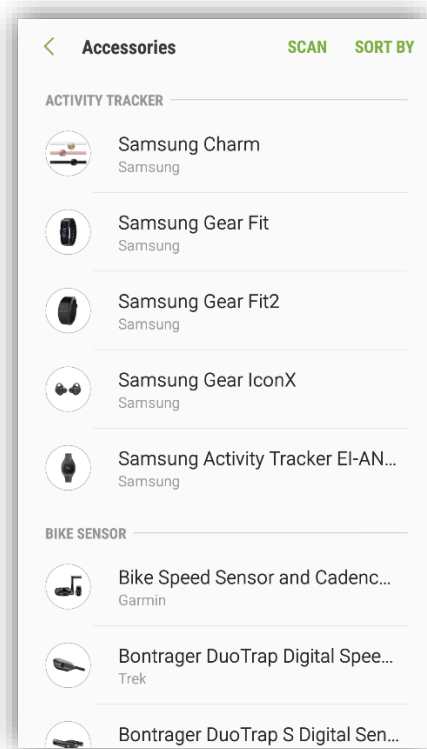

Pic. 2


4- Tap on your smartLAB scale so it turns on. The "W"-symbol should start blinking. Now press on scan in your App. (See Pic. 2).

5- The weight will be detected and displayed on the screen (Pic.3).

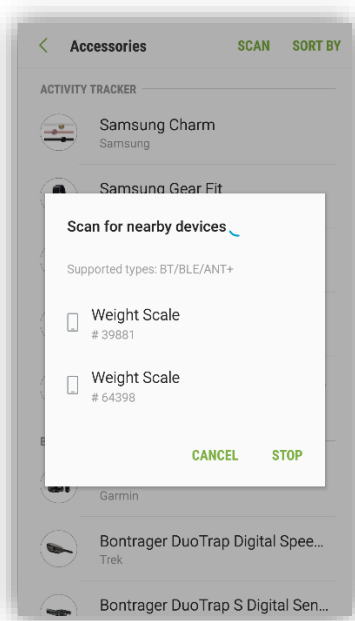

Pic. 3

- 6- Select „Weight Scale“. Your smartLAB scale will now be listed in your list of registered devices. (Pic. 4)

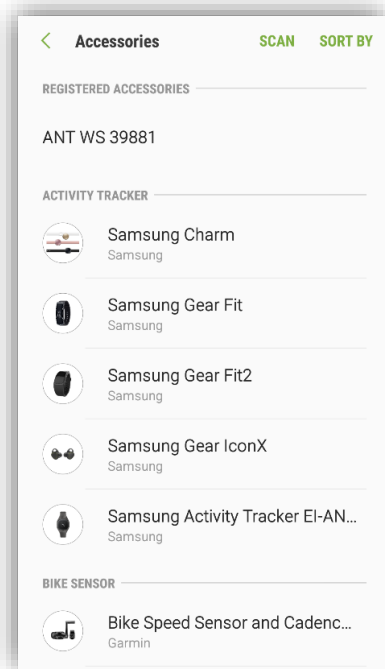

Pic. 4

- 7- Now go to the weight display screen in the main screen. The App will now try to connect to the scale. It is important that the scale is turned on during the pair-up. The smartLAB scale will be detected as Tanita scale.



Pic. 5



- 8- When now weighing yourself, the scale will automatically pair itself with the App.
- 9- Please note, that the S Health App deletes all saved profile data from your smartLAB scale. To avoid this, please update you smartLAB scale with the newest software update. This is possible with the smartLAB Flashtool App, available in your Google Play Store. The instructions for updating can be found in the App. You can find the App here:
<https://play.google.com/store/apps/details?id=info.hmm.bleflashtool>